



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 7

TVW 613 VOLKSWAGEN JETTA 2006>

GOLF 5 EST & GOLF 6 EST 2007>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	C	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	Extension Bar	D	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts
			E	4	M10 x 40 Grade 10.9 Bolts & S/P Washers
			F	4	12 x 25 Flat Washers
			G	4	10 x 40 Flat Washers

1. Remove light clusters.
2. Remove the rear bumper. Five fixings along lower edge, two fixings below each light cluster, one fixing below each light cluster inside the boot, four fixings around each wheel arch and one fixing central on boot shut panel.
3. Temporarily remove the rearmost exhaust hanger and heat shield.
4. Locate item **A** into the open ends of each chassis member and using item **E** with item **G** bolt item **A** to the existing holes in the outer face of each chassis member. Note: These holes are covered with tape.
5. Fully tighten all bolts and ensure the towbar is rigid and secure.
6. Cut a section from the lower edge of the bumper, centrally 65mm wide x 125 mm deep. If required trim to suit. ESTATE: 65mm wide x 90mm deep. 2013> JETTA 65mm wide x 90mm deep.
7. Refit bumper, light clusters and exhaust hanger.
8. Using item **D** with item **F**, bolt item **B** to item **A**.
9. Using item **C** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

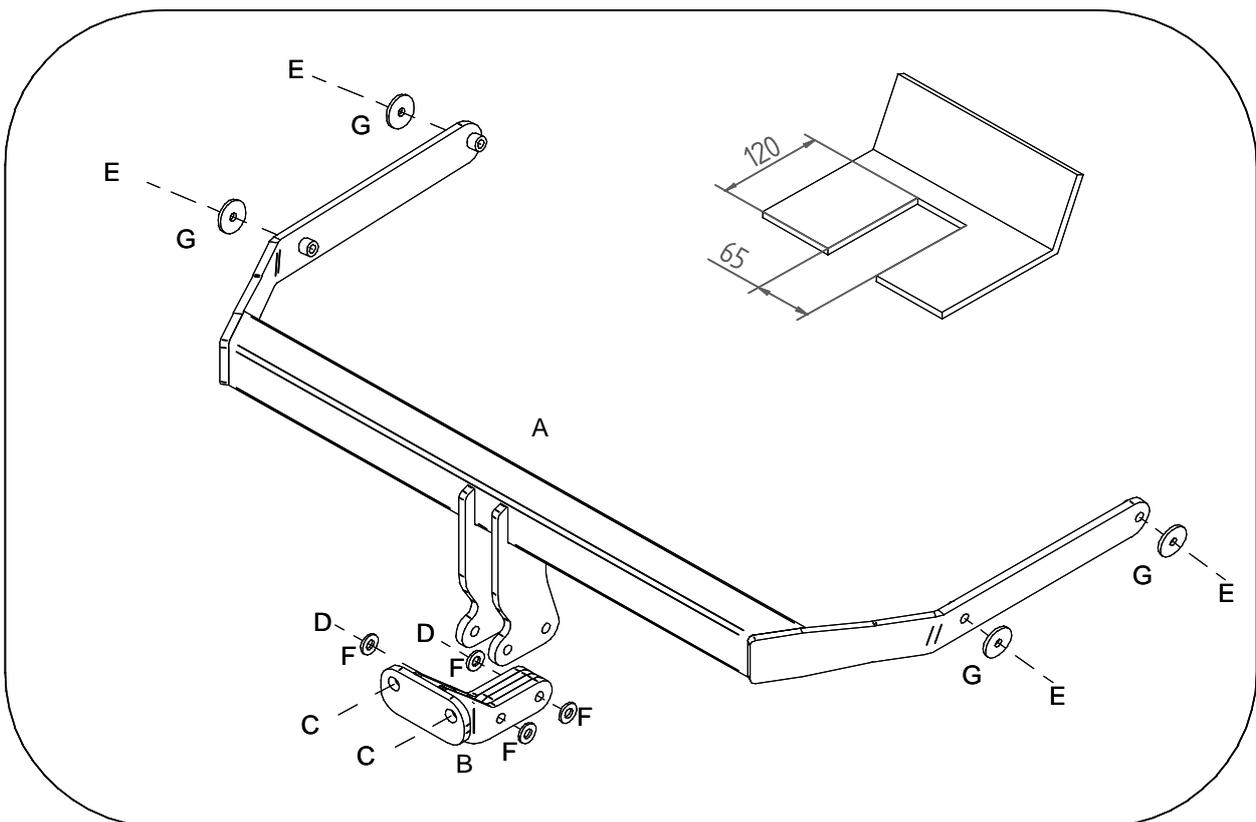

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.