



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

TVW615 Volkswagen Passat Est & Sal 1997-2005 Skoda Superb Sal 2002 - 2008

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	4	M12 x 35 Bolts, Nuts & S/P Washers
B	2	L/H & R/H Side Arms	F	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts
C	1	Extension Bar	G	4	M10 x 100 Bolts, 2 Nuts, 4 S/P Washers
D	2	M16 x 50 Bolts, Nuts Washers	H	8	12 x 25 Flat Washers
			J	6	10 x 30 Flat Washers
			K	1	Socket Plate

1. Remove the rear bumper (2 screws on the top edge, six screws along the bottom edge, three screws and a steel clip around each wheel arch). Facelift models from 2001 remove rear light clusters from Saloon only.
2. Remove the aluminium beam and mounting brackets (these are no longer required).
3. Locate item B into ends of each chassis member and using item G with item J loosely bolt into position (these holes are underneath tape and mastic).
4. Using item E with item H bolt item A to item B.
5. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
6. Re-fit the bumper.
7. Using item F and item H bolt item C to item A.
8. Using item D bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

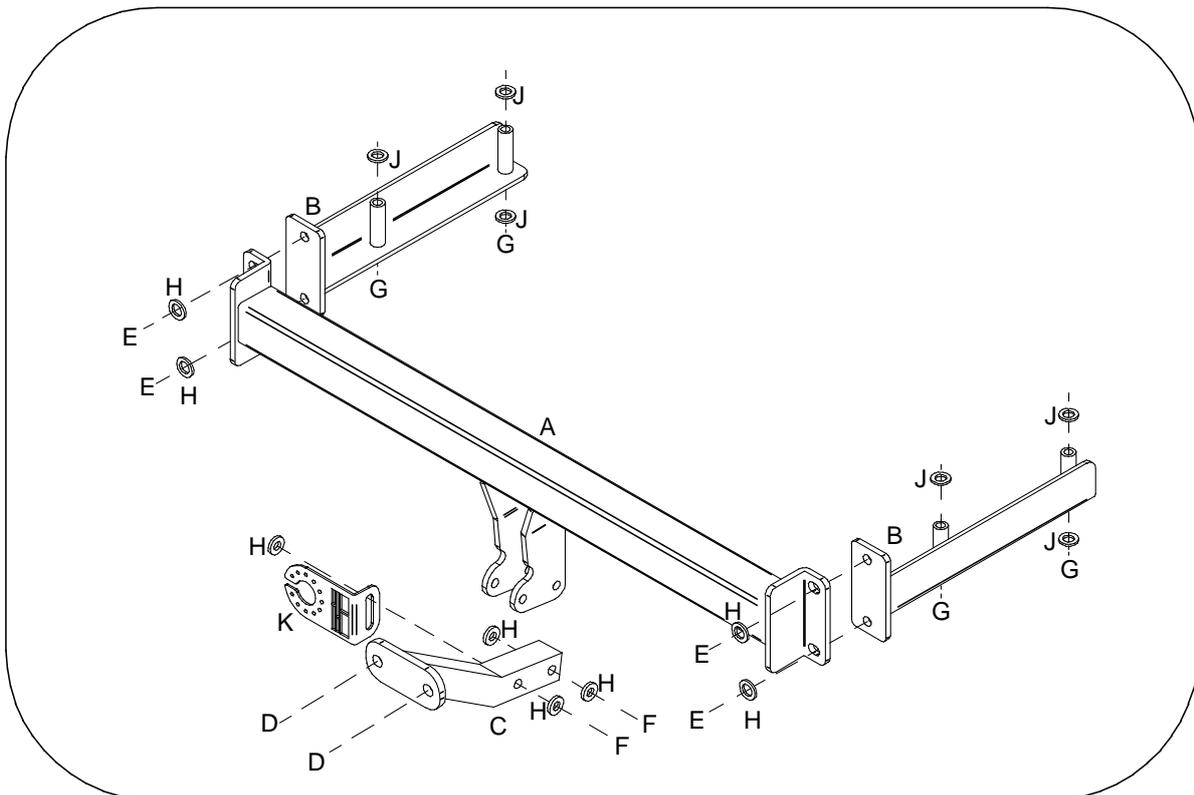

Note: nose load limits and vehicle manufacturers' trailer/caravan weight limits must be observed.