




Issue 1

PRO-TIVE5

| Item | Qty | Description |
|------|-----|---|
| A | 1 | PRO-TIVE5 STEP |
| B | 8 | M12 x 50 Bolts (10.9), 2 Nyloc Nuts & 2 S/P Washers |
| C | 8 | 12 x 30 Flat Washers |
| D | 8 | Black M12 Bolt Caps |

1. Using Item **B** with Item **C** loosely fix the Towbar crossmember between each side arm at the forward upper mounting point only leaving the fixing loose enough to enable you to slide Item **A** through the open slot.
2. Using Item **B** with Item **C** fix Item **A** through the remaining fixing point.
3. Fully tighten all fixings ensuring the Towbar and Pro-Step are rigid, square and secure.

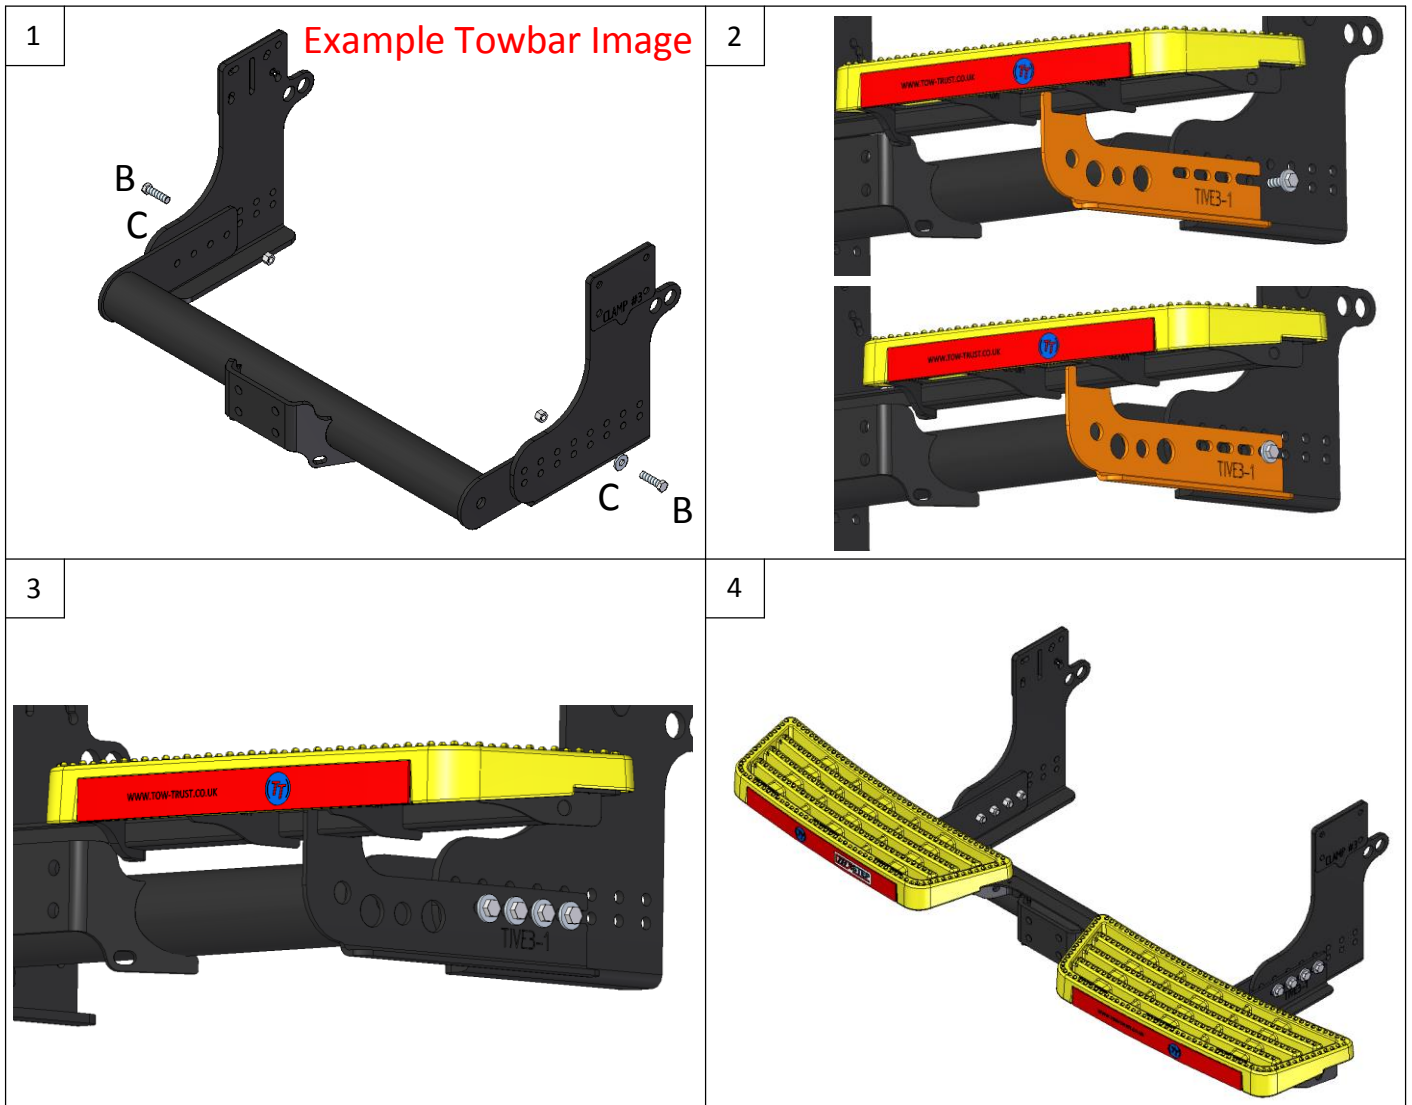

Note:

1. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.