

Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting



Issue 2


TFD20 FORD TRANSIT CUSTOM 2012>

Item	Qty	Description	Item	Qty	Description
A	1	TFD20 Crossmember	C	2	M16 x 55 Bolts & Nyloc Nuts
B	2	Handed Side Arms	D	8	M12 x 100 Grade 10.9 Bolts, 4 Nyloc Nuts & 4 S/P Washers
			E	6	M12 x 45 Grade 10.9 Bolts & Nyloc Nuts
			F	4	12 x 30 Flat Washers
			G	24	12 x 25 Flat Washers

TOWBAR INSTALLATION:

1. Lower the spare wheel to gain access to Towbar mounting points.
2. Remove the two fixings each side fixing the bumper brackets to the chassis members.
3. Using Items D with Items G loosely fix Items B to each correct chassis member using Item F as spacers on the top two mounting points only.
4. Using Items E with Items G fix Item A between Towbar side arms (Items B).
5. Using Items C fix your desired ball bracket and wiring plate (Not supplied in this kit) to Item A.
6. Fully tighten all fixings ensuring the Towbar is rigid, square and secure.
7. Raise the spare wheel back into its original location.

TFD20

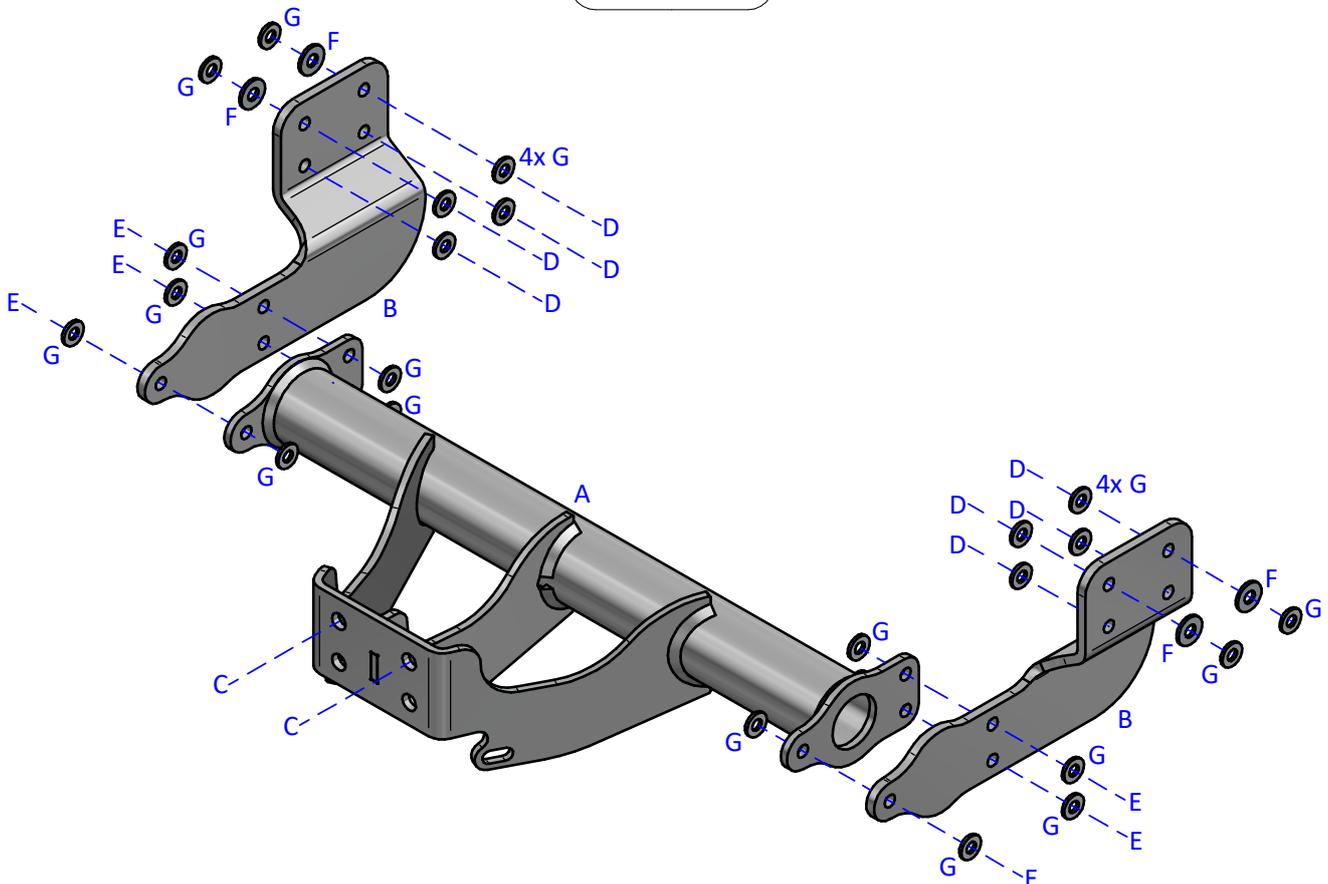

** Item F are used as spacers **

Note:

1. Torque Settings see notes overleaf.
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.