



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 4

TF139A Transit Van & SWB Chassis Cab/Pickup 1986 - 2000 & Flareside 1994 - 2000

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	6	M10 x 100 Bolts Nuts & S/P Washers
B	2	Side Arms	E	6	M12 x 35 Bolts, 4 Nuts & 6 S/P Washers
C	2	M16 x 50 Bolts, Nuts & S/P Washers	F	2	10 x 40 Flat Washers
			G	2	16 x 27 Flat Washers

1. Lower the spare wheel.
2. Remove the existing bolts securing the rear bumper and towing eye.
3. Using Item **D** and Item **F** loosely bolt Item **B** to inside face of each chassis member.
4. Using Item **E** loosely bolt Item **A** to Item **B**.
5. Using Item **C** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate. Item **G** may be required under the bolt head when not using PRO-TOW Couplings.
6. Fully tighten all nuts and bolts and ensure the Towbar is rigid and secure.
7. Replace the spare wheel.

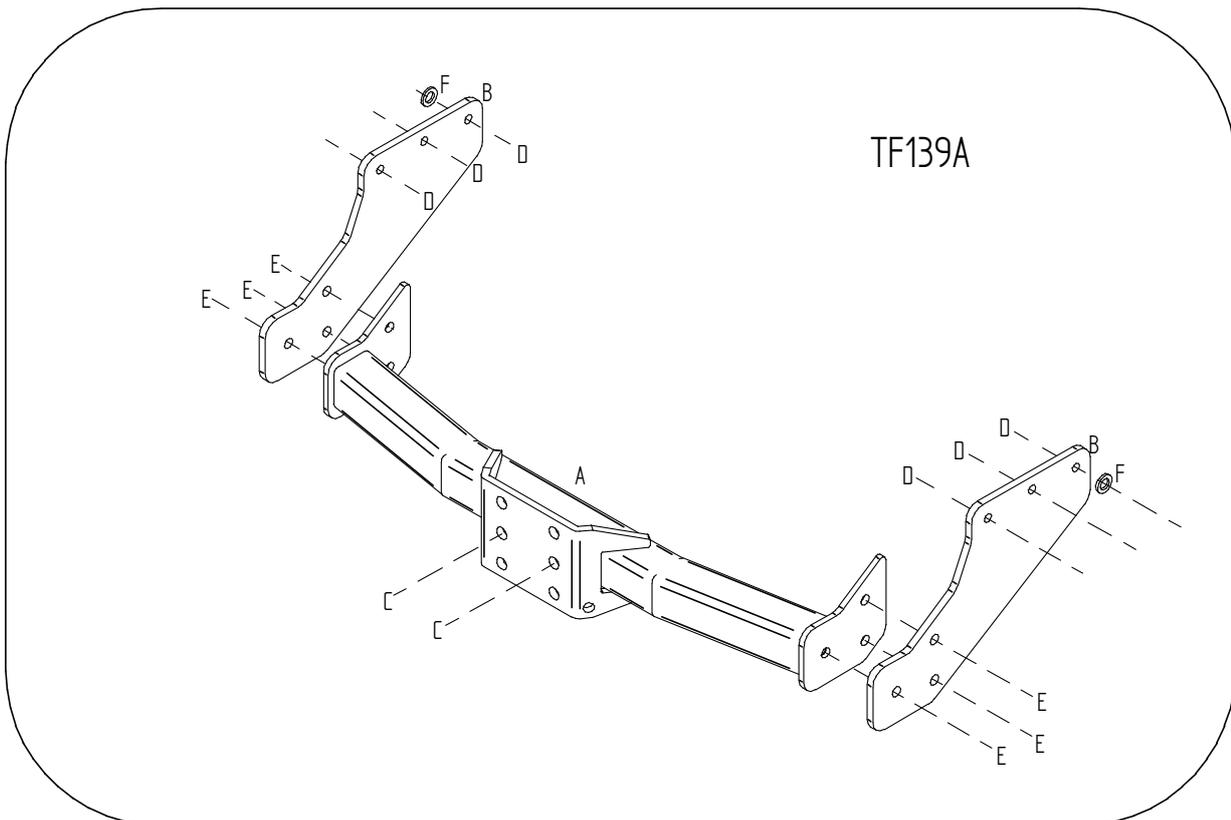

Note: nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.