




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

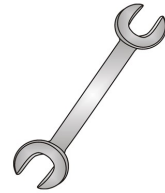


Issue 3

TMZ6A MAZDA CX-5 2012> (Inc. AdBlue Models)

Item	Qty	Description	Item	Qty	Description
A	1	TMZ6A Crossmember	E	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Handed Side Arms	F	4	M12 x 35 x 1.25 Bolts & S/P Washers
C	1	Extension	G	8	M12 x 40 Bolts, 6 Nyloc Nuts & 2 S/P Washers
D	2	M12 Clamp Plates	H	1	M12 x 130 Bolt (10.9) & Nyloc Nut
			J	2	M12 x 40 Bolts & Nyloc Nuts
			K	20	12 x 25 Flat Washers
			L	1	30mm O/D Spacer Tube 60mm Long

TOWBAR INSTALLATION:

1. Locate the Towbar mounting points on the outside face of each chassis member, these are usually covered with tape.
2. Remove the fixings from the lower edge of the bumper.
3. Using Item **F** with Item **K** loosely fix the N/S side arm (Item **B**) to the forward mounting point only.
4. Insert Item **D** through the hole in the lower face of the N/S chassis member only and fix Item **B** through the rearmost fixing point using Item **G** with Item **K**.
5. Insert Item **A** into the bumper and fix to the N/S side arm (Item **B**) using Item **G** with Item **K**. (Some models require the exhaust silencer to be lowered to gain access into the bumper)
6. Using Item **F** with Item **K** loosely fix the O/S side arm (Item **B**) to the forward mounting point only.
7. Insert Item **D** through the hole in the lower face of the O/S chassis member and fix Item **B** through the rearmost fixing point using Item **G** with Item **K**. (**Note:** Some models require Item **F** at this point as the vehicle has captive thread)
8. Using Item **G** with Item **K** fix Item **A** to the O/S side arm (Item **B**).
9. Using Item **J** with Item **K**, Item **H** with Item **K** fix Item **C** to Item **A** ensuring Item **L** is fitted between the lower fixing point.
10. Using Item **E** fix your desired ball bracket and wiring plate (Not supplied in this kit) to Item **C**.
11. Fully tighten all fixings ensuring the Towbar is rigid, square and secure. Refit all fixings to the bumpers lower edge.

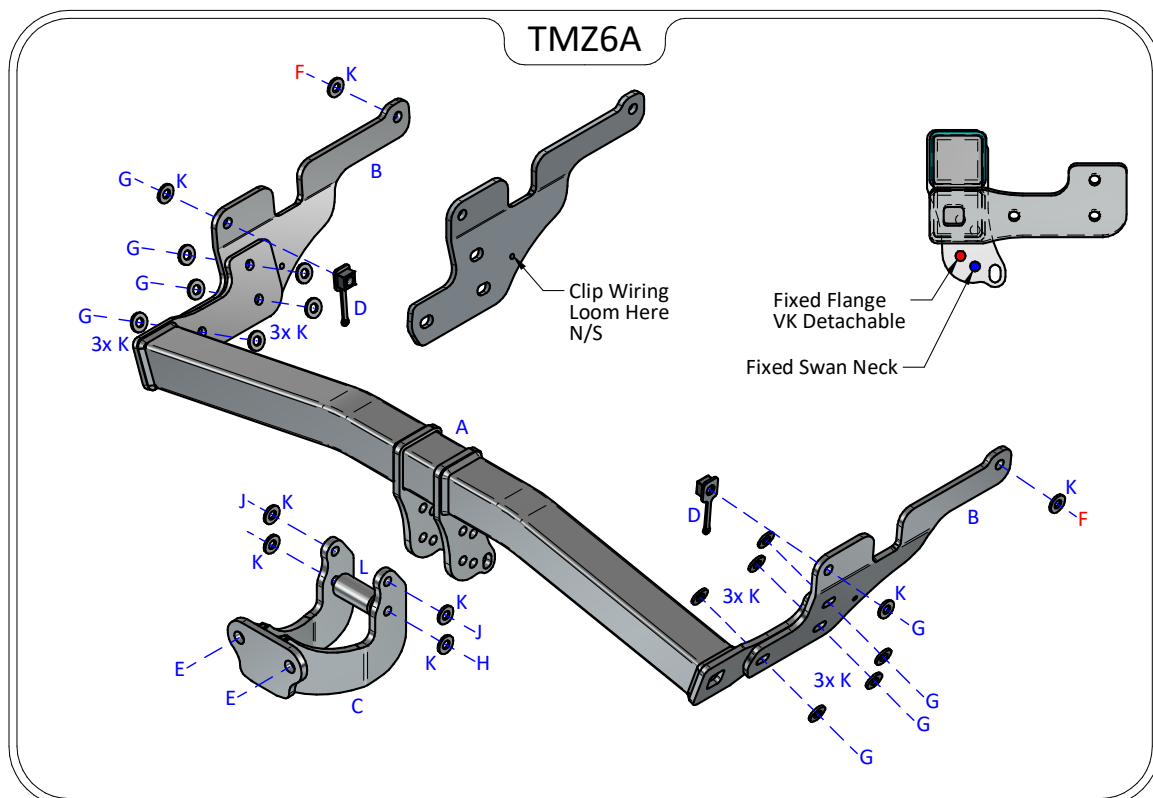

Note:

1. Torque Settings see notes overleaf.
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.