

**TAD8VK Audi Q4 e-tron / Q4 Sportback e-tron 2020> Audi Q5 e-tron / Q5 Sportback e-tron 2023>
Skoda Enyaq iV/ Enyaq Coupe iV 2020> Volkswagen ID.4 / ID.5 / ID.7 2020> Ford Explorer EV 2024> Ford Capri 2025>**

| Item | Qty | Description | Item | Qty | Description |
|------|-----|----------------------|------|-----|--|
| A | 1 | TAD8 Crossbar | D | 1 | TTFP/RH Flip Up Socket Plate |
| B1 | 1 | L/H Side Arm | E | 2 | M12 x 22 Bolts & S/P Washers |
| B2 | 1 | R/H Side Arm | F | 2 | M12 x 25 Bolts & S/P Washers |
| C | 1 | 6#16 Detachable Neck | G | 4 | M6 x 20 Self Tapping Bolts |
| X | | OEM GSM Ariel | H | 8 | M12 x 45 Bolts, 4 S/P Washers & 4 Nyloc Nuts |
| | | | J | 4 | 6 x 15 Flat Washers |
| | | | K | 12 | 12 x 25 Flat Washers |
| | | | L | 4 | 12 x 30 Flat Washers |

Bumper Removal:

1. Open the tailgate and remove the inner light covers to reveal two fixings for the rear lights from each side and remove.
2. Remove the three fixings from each wheel arch liner peel back then remove the tip screw and the fixing halfway down from each side and pull the bumper out sideways.
3. Remove the eleven fixings on the lower bumper edge.
4. Carefully release the bumper tabs from the light cluster area, pull the bumper rearwards and once free from the rear panel unplug the wiring loom from the offside.
5. Remove items X from the rear crash beam if applicable.
6. Remove the rear crash beam, seven fixings then refit the fixings into the rear panel to prevent water ingress.
7. Remove the tape covering the towbar mounting points.

Towbar Installation:

8. Loosely fix items **B1** and **B2** inside the chassis using items **H** with items **L** at the forward mounting point only.
9. Using figure 1, loosely fix item **A** on the correct setting inside the chassis and to items **B1** and **B2** using items **H** with items **L** at the rearmost mounting point and items **H** with items **K** at the remaining points.
10. Using figure 2, fix item **C** and item **D** to item **A** on the correct setting using Items **E** with Items **K** and Item **F** with Items **K**.
11. Fully tighten all fixings ensuring the Towbar is rigid, square, and secure.
12. Cut the pre-marked area from the rear bumper and refit along with the light clusters.

Figure 1



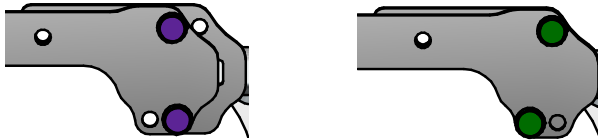


Figure 2

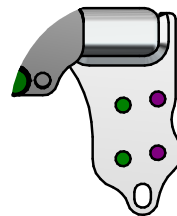

Purple:- Skoda Enyaq & Enyaq Coupe iV 2020>

Green:- Audi Q4 & Q4 Sportback 2020>
Audi Q5 & Q5 Sportback 2023>
Volkswagen ID.4/ID.5 2020>
Volkswagen ID.7 2023>
Ford Explorer EV 2024>
Ford Capri 2025>

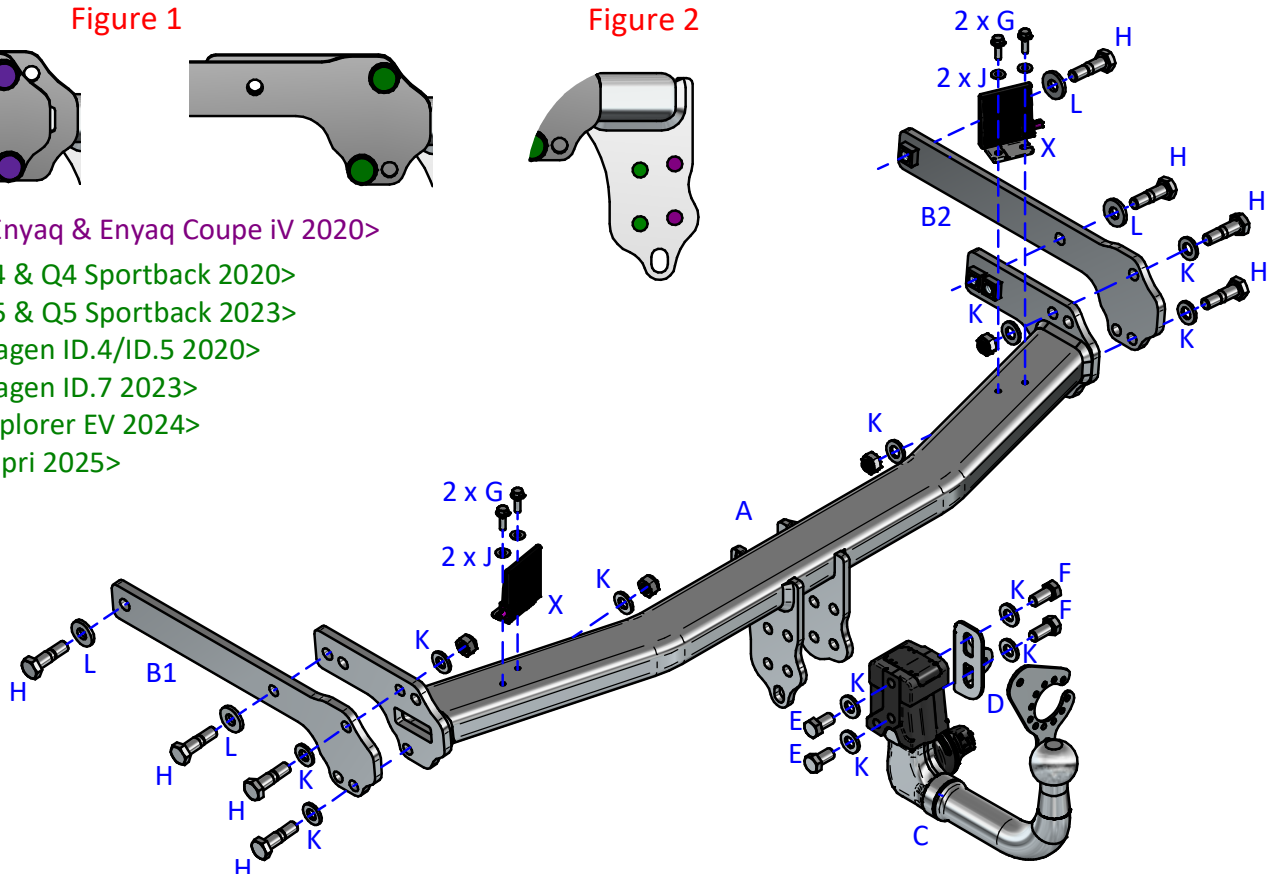

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.