

## TREN21 Renault Master Van Single Rear Wheel 840mm Wide Chassis XDD 2025>


Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TREN21 Crossbar Assembly	D	2	M16 x 60 Bolts & Nyloc Nuts	215 Nm
B1	1	Left Hand Side Arm	E	14	M12 x 45 (10.9) Bolts 10 S/P Washers & 4 Nyloc Nuts	130 Nm
B2	1	Right Hand Side Arm	F	18	12 x40 Flat Washers	
C	1	Spacer Plate				

### Preparation For Installation (OEM Step Models Only)

- Remove the middle and lower fixings from the mudguards if installed. The top fixing remain in place and the mudguards will remain attached to the bumper when removed.
- Remove the remaining two fixings if the vehicle had mud guards or three fixings on vehicles without separating the wheel arch trim.

### Towbar Installation For All Models (With & Without OEM Step)

- Using Figure 4 as a guide loosely assembly Item A with items B1, B2, C1, C2, D1 and D2 using items K with items M.
- Using Figure 5 as a guide slide the assembly into the chassis opening and loosely fix in place items B1, B2, C1 and C2 in place using items J with items M into the rear panel mounting points.
- Using Figure 5 as a guide loosely fix items D1 and D2 using items L with items N into the vertical mounting points.
- Loosely fix item E to item A on the correct setting for the vehicle as shown in Figure 3 using items G with items M and item H with items M ensuring item T1 is fitted as shown in Figure 6.
- Using items F secure your desired ball bracket and wiring plate (Not supplied in this kit) to item E and fully tighten the remaining fixings.

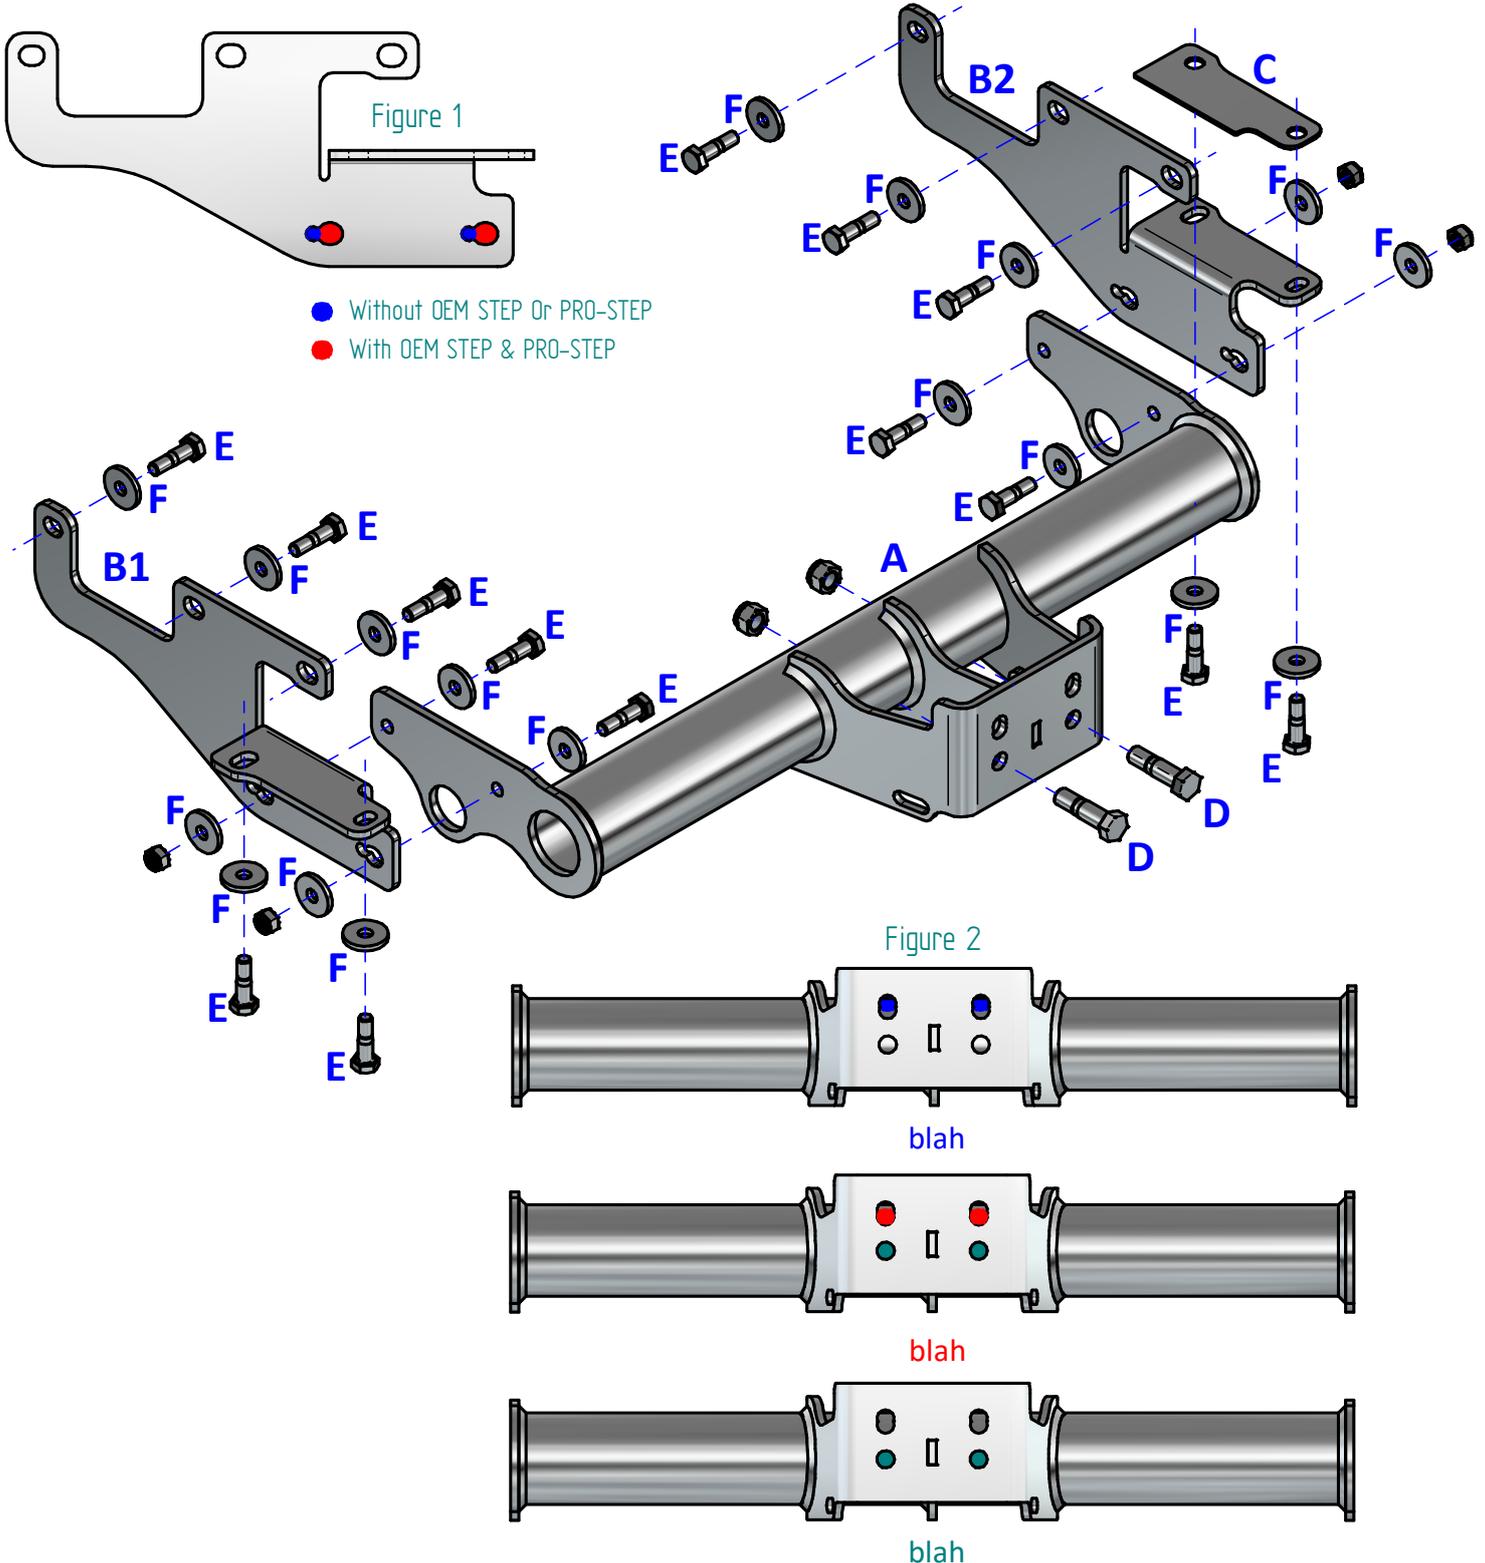

### Notes:

- For Torque settings see the column next to each item in the list.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
- We recommend the use of PRO-TOW Couplings with all our products.