

## TCHER1VK Omoda 5 2023>, Jaecoo 5 2025> Jaecoo 7 2023>

| Item | Qty | Description          | Item | Qty | Description                                 | Torque Setting |
|------|-----|----------------------|------|-----|---------------------------------------------|----------------|
| A    | 1   | TCHER1 Crossbar      | D    | 1   | Universal Flip Up Socket Plate              |                |
| B    | 2   | Side Arms            | E    | 2   | M12 X 25 Bolts & S/P Washers                | 100 Nm         |
| C    | 1   | 6#14 Detachable Neck | F    | 2   | M12 X 25 Bolts & S/P Washers                | 100 Nm         |
|      |     |                      | G    | 6   | M12 X 40 x <b>1.25</b> Bolts & S/P Washers  | 100 Nm         |
|      |     |                      | H    | 4   | M12 X 45 ( <b>10.9</b> ) Bolts & Nyloc Nuts | 130 Nm         |
|      |     |                      | J    | 18  | 12 x 25 Flat Washer                         |                |

**Note:** It is advisable that a crowfoots spanner is used to torque the chassis fixings due to limited access.

**Jaecoo 7 SHS (PHEV) does not need a bumper cut.**

### Towbar Installation:

1. Remove the mastic from the inside face of each chassis rail, ensuring the complete surface where item **B** will be mounted is clear.
2. Using **Figure 1** cut off or bend the bumper bracket and using **Figure 2** remove the bumper tag from the centre of the bumper.
3. Loosely fix items **B** to the inside face of each chassis rail using items **G** with items **J**.
4. Using **Figure 3** as a guide loosely fix item **A** to items **B** in the correct setting for the vehicle using items **G** with items **J**.
5. Loosely fix item **C** with items **D** to item **A** using items **F** with items **J** and items **E** with items **J**.
6. Fully tighten all fixings ensuring the towbar is ridged square and secure.

Figure 1

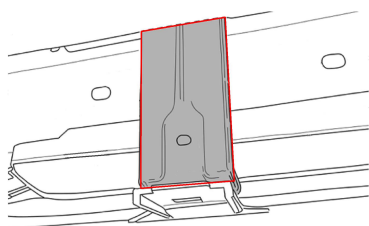


Figure 2


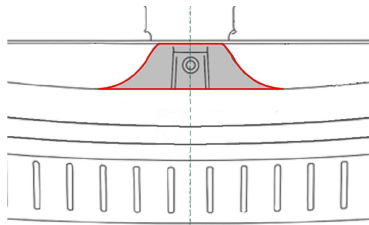


Figure 3

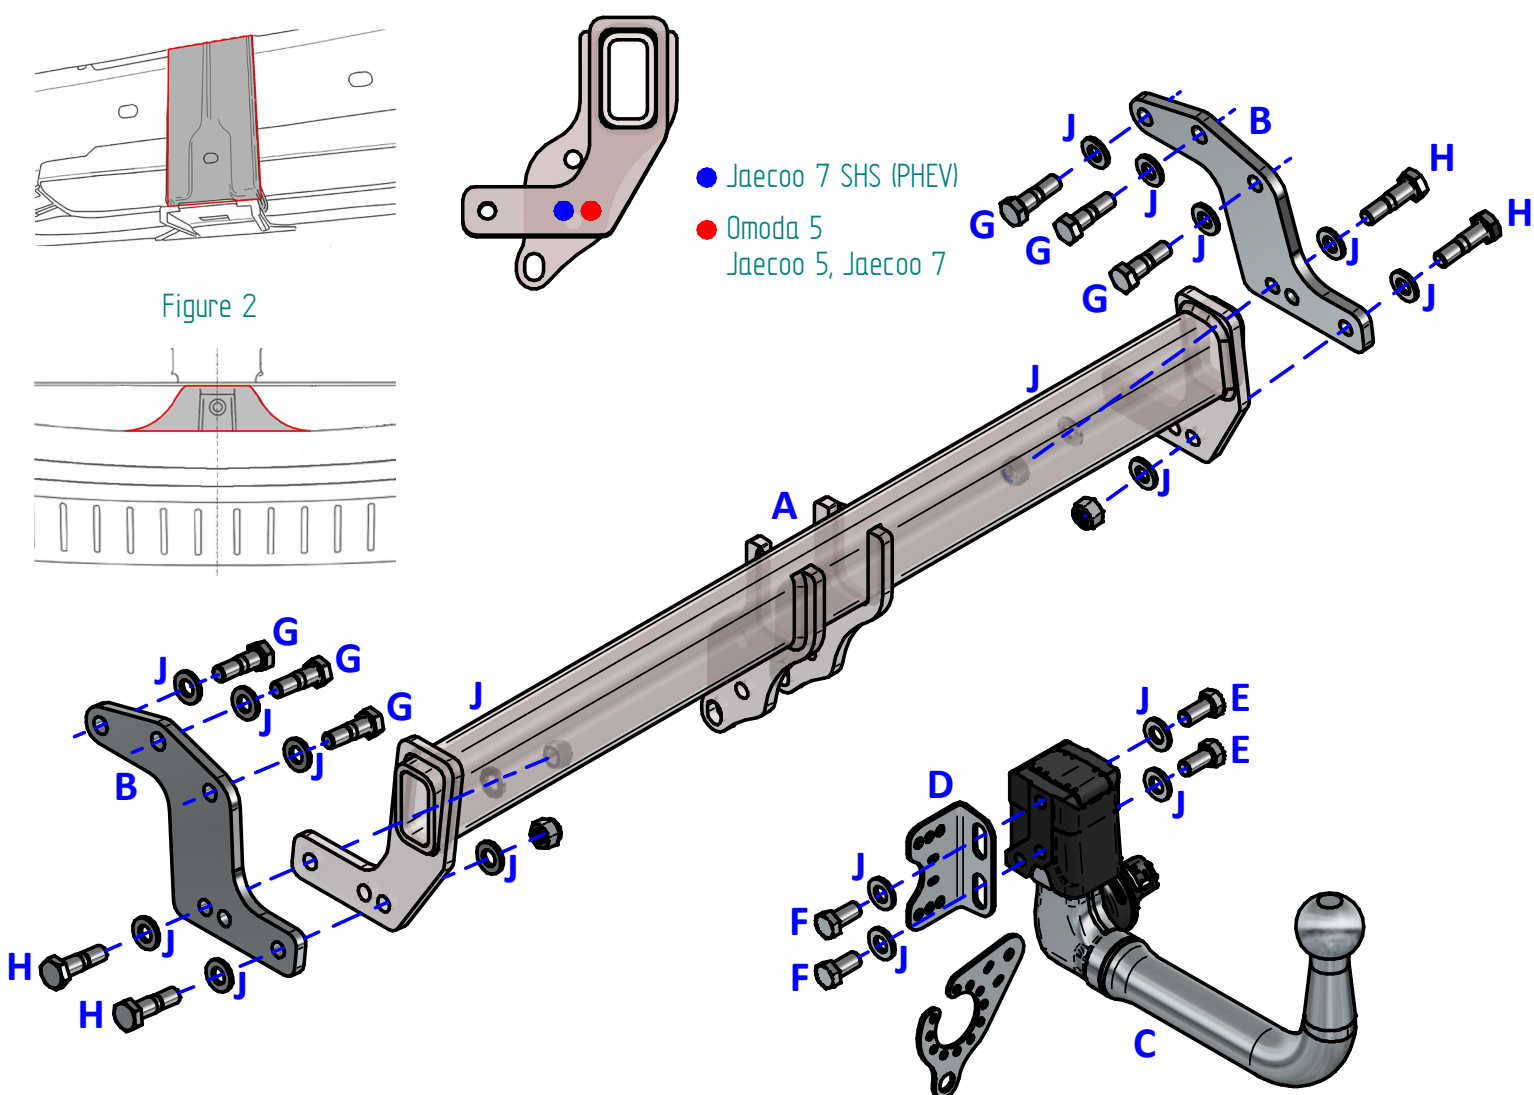

### Notes:

1. For Torque settings see the column next to each item in the list.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.