




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

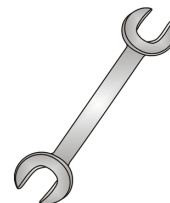


Issue 2

## TFD16SN FORD EDGE 2016>

Item	Qty	Description	Item	Qty	Description
A	1	TFD16 Crossmember	D	1	VASP8 L/H Socket Plate
B	2	Handed Side Arms	E	6	M14 x 40 Bolts & S/P Washers
C	1	ACS8 / 9208 Swan Neck	F	4	M14 x 45 Bolts & Nyloc Nuts
			G	2	M12 x 110 Grade 10.9 Bolts & Nyloc Nuts
			H	2	15mm Spacer Plates
			J	14	14 x 27 Flat Washers
			K	4	12 x 25 Flat Washers

### TOWBAR INSTALLATION:

1. Remove the central and side under trays from the rear of the vehicle.
2. Remove four fixings from each chassis member securing the rear impact beam (Two vertical and two on the outside face) (Hand fixings back to the customer). **Note:** Models with Adblue will have a stud fixing in the forwardmost mounting point, remove the nut to lower the tank (support tank) then fit Item **B** over the stud, rehang the tank from the stud using the original nut.
3. Using Items **E** with Items **J** fix items **B** to each chassis member.
4. Carefully insert Item **A** into the rear bumper and fix to Items **B** using Items **F** with items **J**.
5. Using Items **G** with Items **K** and Item **H** fix Item **C** and Item **D** to Item **A**.
6. Fully tighten all fixings ensuring the Towbar is rigid, square, and secure.
7. Trim the central under tray where it meets Items **B** and refit to the vehicle.
8. Refit the side under trays.

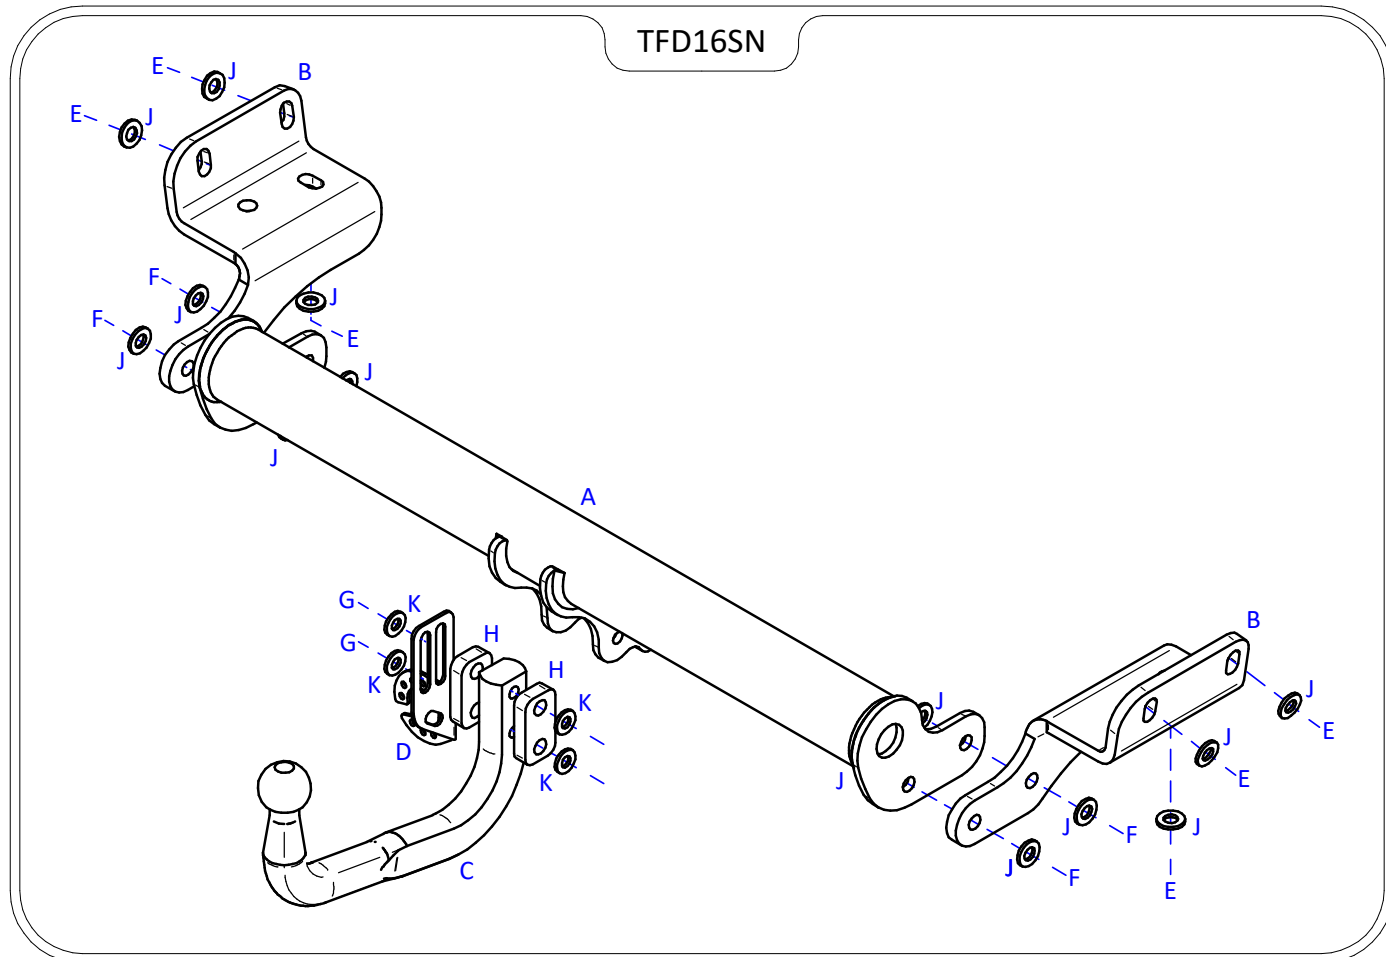

### Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.