

TPUG16SN-9207 CITROEN C4 2021> / DS3 CROSSBACK 2020> / PEUGEOT 2008 2020> / VAUXHALL MOKKA 2020>

Item	Qty	Description	Item	Qty	Description
A	1	TPUG16 Crossmember	E	1	VASP8 R/H Socket Plate
A1	2	Rear Panel Brackets	F	6	M10 x 30 Bolts & S/P Washers
B	2	Side Arms	G	6	M10 x 35 Bolts & Nyloc Nuts
C	2	Angle Brackets	H	6	M8 x 45 (10.9) Bolts & S/P Washers
D	1	ACS7 / 9207 Swan Neck	J	2	M12 x 110 Grade 10.9 Bolts & Nyloc Nuts
			K	2	15mm Spacer Plates
			L	18	10 x 25 Flat Washers
			M	6	8 x 25 H/D Flat Washers
			N	4	12 x 25 Flat Washers
			P	4	Small M10 Cage Nuts (Metal)

BUMPER REMOVAL:

1. Open the rear tailgate, **2008**: remove one fixings either side of boot opening, remove the trim from the inside edge of each light cluster, this will enable you to access the bumper release clips (you may find this easier removing the complete light cluster, one fixing found inside the boot), **All Models**: remove three fixings from each wheel arch, unclip each wheel arch trim, remove six fixings from the bumper lower edge, carefully pull bumper tips sideways then carefully release from around each light cluster area, pull rearward to finally release the bumper from the vehicle body. Unplug any necessary wiring looms.


TOWBAR INSTALLATION:

1. Locate the Towbar mounting points on the outside and lower face of each chassis (these will be covered with tape), clean the chassis faces then insert Items **P** into the outside face mounting points.
2. **DS3 rear beam with weights ONLY**: Remove rear beam and weights and hand back to customer, these are not refitted with Towbar assembly.
3. **All Models**: One side at a time, remove all fixings securing the rear impact beam to the vehicle, Using Item **H** with Item **M** fix Items **A1** to the rear panel sandwiching the rear impact beam. (Only fit to the outer upper point at this stage).
4. Using Item **H** with Item **M** fix Item **A** and Items **A1** to the rear panel.
5. Fix Items **C** to the lower face of each chassis member using Item **F** and Item **L**.
6. Fix Items **B** to the outside face of each chassis member using Item **F** and Item **L**.
7. Fix items **B** to Items **C** and Item **A** using Items **G** and Items **L**.
8. Using Item **J** with Item **N** and Item **K** fix item **D** and Item **E** to Item **A**.
9. Fully tighten all fixings ensuring the Towbar is rigid, square, and secure.
10. Cut the rear bumper as shown below and refit.


Cage Nut Installation Method




2008 Bumper Cut

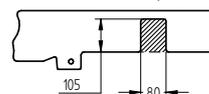


DS3 Bumper Cut

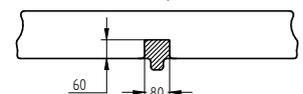


C4 Bumper Cut

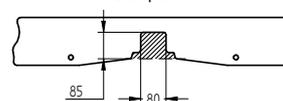

* No Bumper Cut On Mokka

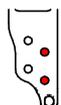


Neck Mounting Position

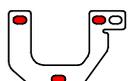

N/S Mounting Points



O/S Mounting Points

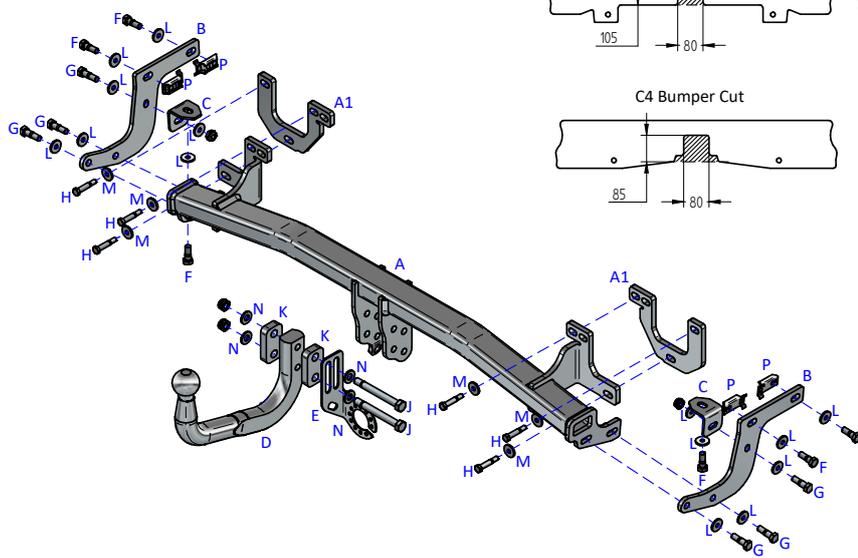

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.